# 数字式总线制八防区模块使用说明书

#### 一、概述

KS-Z85A 数字式总线制八防区模块提供 8 个标准线尾回路防区,且这 8 个防区都为 24 小时防区属性。通过自带的插针来设定终端设备号。每个 KS-Z31A 楼道机最多接入 30 个 KS-Z85A 数字式总线制八防区模块。

注意: 防区模块地址设定只能在断电的情况下,设置才有效。

### 二、 技术参数

工作电压: DC10.5V-15V

工作电流: 42mA 防区反应时间: 500ms 防区末端电阻: 2.2k

工作环境: 温度 -10℃~+50℃

湿度 10%~80%

#### 三、 接口定义

1) 有线防区接口: Z1-Z8

Z1-Z8&C 为 8 路有线防区接线端口, Z1-Z8 端子为防区回路正极端, C 端子为防区回路 负极端。

2) 总线接口: 12V、GND、A、B 与主机连接的接口。

3) 防区总线接入 120 Ω 平衡电阻设置: AB

ON: KS-Z8608A 防区总线上接入 120 Ω 的平衡电阻。

OFF: KS-Z8608A 防区总线上未接入 120 Ω 的平衡电阻。

4) 地址设置: A0-A4

数字式总线制八防区模块地址设置,设置防区模块的终端设备号。

#### 四、 与楼道机连接示意图

## 五、 防区模块编址

KS-Z85A 上有 5 个地址插针 AO-A4, 用来设置 KS-Z85A 的终端设备号。

终端设备号	A0	A1	A2	A3	A4	终端设备号	A0	A1	A2	A3	A4
01	ON	OFF	OFF	OFF	OFF	16	OFF	OFF	OFF	OFF	ON
02	OFF	ON	OFF	OFF	OFF	17	ON	OFF	OFF	OFF	ON
03	ON	ON	OFF	OFF	OFF	18	OFF	ON	OFF	OFF	ON
04	OFF	OFF	ON	OFF	OFF	19	ON	ON	OFF	OFF	ON
05	ON	OFF	ON	OFF	OFF	20	OFF	OFF	ON	OFF	ON
06	OFF	ON	ON	OFF	OFF	21	ON	OFF	ON	OFF	ON

07	ON	ON	ON	OFF	OFF	22	OFF	ON	ON	OFF	ON
08	OFF	OFF	OFF	ON	OFF	23	ON	ON	ON	OFF	ON
09	ON	OFF	OFF	ON	OFF	24	OFF	OFF	OFF	ON	ON
10	OFF	ON	OFF	ON	OFF	25	ON	OFF	OFF	ON	ON
11	ON	ON	OFF	ON	OFF	26	OFF	ON	OFF	ON	ON
12	OFF	OFF	ON	ON	OFF	27	ON	ON	OFF	ON	ON
13	ON	OFF	ON	ON	OFF	28	OFF	OFF	ON	ON	ON
14	OFF	ON	ON	ON	OFF	29	ON	OFF	ON	ON	ON
15	ON	ON	ON	ON	OFF	30	OFF	ON	ON	ON	ON